



SPECIAL FEATURES

- Silicone keyboard with 107 keys incl. num block
- Integrated capacitive touchpad
- IP68 protection, can be submerged into liquids
- Can be cleaned with soapy water, disinfectants or other cleaning agents
- KeyLock function to disable the keys while cleaning the keyboard
- Ergonomic design
- Flat key profile for easy cleaning
- Comfortable typing

SPECIFICATION

Number of keys:	107	Operating temperature:	0 °C to +70 °C
Keyswitch technology:	carbon contacts	Storage temperature:	-30 °C to +70 °C
Operating force:	1.5 N	Dimensions:	377 x 157 x 15 mm
Switch travel:	1.3 mm	Weight:	approx. 913 g
Switching cycles:	approx. 1 mill. (per key)	Certifications:	CE, FCC, IP-Protocol, Certificate of guarantee, EMC protocol
Protection level (max):	IP68	Guarantee:	3 years *
Housing material:	silicone		
Housing colour:	white		
Interfaces:	USB		
USB compatibility:	compatible with USB 2.0		
Cable length:	2 m		

TOUCHPAD SPECIFICATION

Operating principle:	capacitive
Dimensions:	60 x 42 mm


ORDER INFORMATION

Cat.No.	Product description	Colour	Layout
KG22204	TKG-107-TOUCH-IP68-WHITE-USB-DE	white	German
KG22205	TKG-107-TOUCH-IP68-WHITE-USB-US/EU	white	US / EU
KG23204	TKG-107-TOUCH-IP68-WHITE-USB-CH	white	Switzerland
KG23242	TKG-107-TOUCH-IP68-WHITE-USB-FR	white	French
KG23254	TKG-107-TOUCH-IP68-WHITE-USB-IT	white	Italian
KG23202	TKG-107-TOUCH-IP68-WHITE-USB-SKAN	white	Scandinavian
KG23220	TKG-107-TOUCH-IP68-WHITE-USB-UK	white	UK English
KG23232	TKG-107-TOUCH-IP68-WHITE-USB-US/ARAB	white	US / Arabic

Other language versions / Interfaces / configurations available on request.

* on the electric function

Subject to modifications and errors

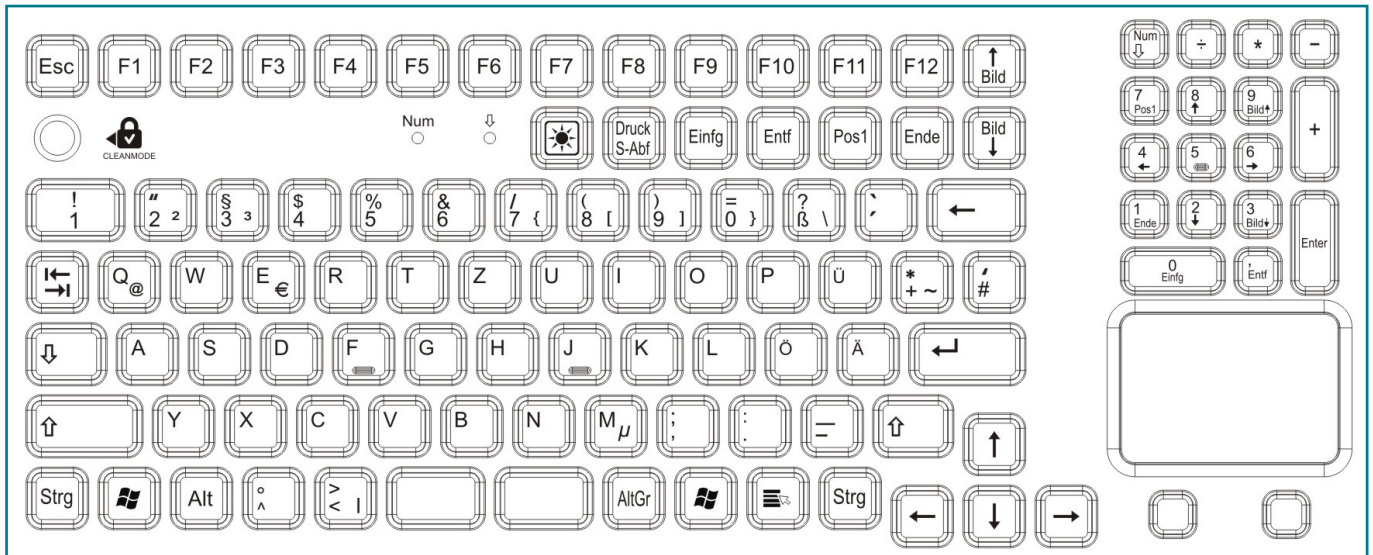

1. KEY FUNCTIONS:

Touchpad-tapping*: + + **F2** > Activates and deactivates the tapping function

Key lock: > Press and hold for 2 seconds

2. SPECIAL FUNCTIONS:

Clean mode: To activate or deactivate the clean mode, hold this key down for 2 seconds. This deactivates the key function and the touchpad. You can then clean the keyboard without triggering any incorrect commands.

***Touchpad-tapping:** Touchpad tapping allows you to use different functions by typing the touchpad surface once or several times (e.g. in word processing: single tap to position the cursor, double tap to select paragraphs)

You can find operating instructions and hints on cleaning and disinfecting at:

www.gett-group-service.com