

TECHNICAL DATA SHEET

NBVE series




NBVE 110 N

SINGLE PURPOSE UV-C FLOW GERMICIDAL LAMP

HOW DOES THE SINGLE PURPOSE UV-C FLOW GERMICIDAL LAMP WORK?

Contaminated air is drawn by a fan – through a filter catching dust and other contaminations into the disinfection chamber. The UV-C radiation intensity and the time during which air remains in the disinfection chamber are selected so that air blown out from the lamp is practically free of microorganisms. It should also be noted that the forced flow of the air results in its smooth circulation and cause disinfection of the air in the whole room. This is a safe way to get rid of viruses, bacteria, molds and fungi from the air.

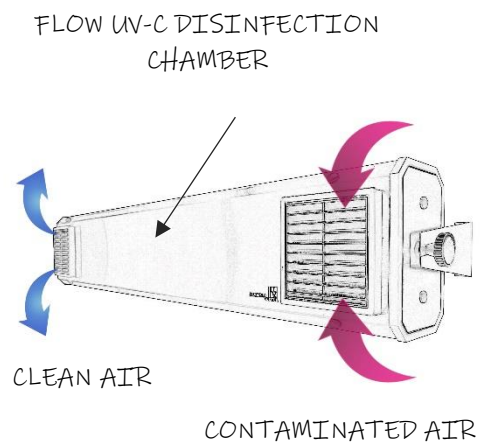

BASIC DATA:

Air flow disinfection function (flow disinfection chamber)	yes
Direct radiation function	no
Presence of people, animals, plants inside the room during disinfection process	allowed
Mounting type	wall-mounted
Mounting from two sides of the device	yes (provides stability)
Working time counter	no
External bulbs	no
Casing material*	INOX steel
Anti-dust filters	yes, 1 filter inside the device, 5 additional pcs. for each lamp
Switch on/off	no
Ambient temperature	+10°C to +40°C
Relative humidity	30% to 70%
Atmospheric pressure	700 hPa to 1060 hPa
Declaration of conformity	yes
User's manual English version	yes

*white color version of NBVE lamps on demand in the same price

TECHNICAL DATA SHEET

NBVE series

NBVE 110 N

SINGLE PURPOSE UV-C FLOW GERMICIDAL LAMP

TECHNICAL DATA:

Supply voltage	230 V, 50 Hz
Power consumption	115 W
UV-C bulbs (Philips/Osram)	2 x 55 W (TUV/HNS)
UV-C radiation wave - length	253,7 nm
Useful lifetime of the UV-C bulbs	min. 8000 h
Radiation intensity of the external UV-C tube at the distance of 1m	-
Fan capacity	199 m ³ /h
Cubage of disinfected room	45-90 m ³
Effective area of the lamp	18-36 m ²
Anti-shock protection class	I
Ingress Protection Code	IP 20
Lamp body dimensions (L x W x H)	1125 x 130 x 215 mm
Overall dimensions (L x W x H)	1190 x 145 x 215 mm
Total lamp mass	7,5 kg
Holders length	10,0 cm
Power cord length	1 m

APPLICATION RECOMMENDATIONS:

Hospitals

- operation theatres
- intensive care units
- emergency rooms
- examination and treatment rooms
- reception units
- patient rooms, isolation rooms
- soiled/dirty utility rooms

Outpatient clinics

Medical laboratories

Chemist's

Beauty salons

HoReCa

- SPA
- hotels
- restaurants
- catering/café

Schools, kindergartens



Ultra-Viol's realisation